

UCCNC Installation - UC 100 device not found

In certain installation or operating systems constellations with Windows UCCNC runs after installation only in demo mode (see UCCNC screen top bar ("Demo"), no flash of blue LED at the controller). The reason for this is that during the UCCNC installation process the installation of the hardware driver of UC 100 fails.


The driver re-installation has to be done manually:


1. Check type of Windows system installation (32bit or 64bit).

2. Open the device manager. UC 100 is listed in the "Other devices" section and marked with an exclamation mark.

3. Right mouse click - update driver software.

4. Choose the manual browse selection.

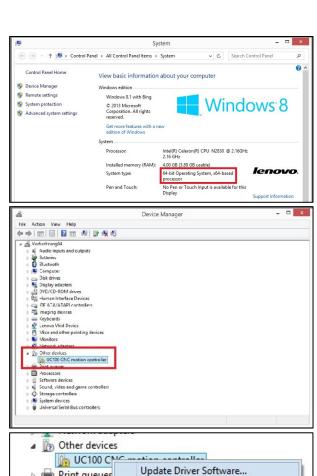

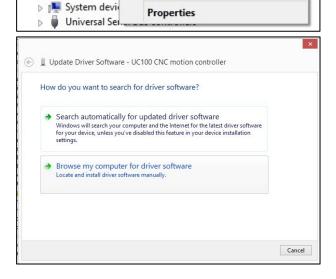

Disable

Uninstall

Scan for hardware changes

Print queues

▶ ■ Processors


Sound, video





5. Browse manually for the driver's directory.

6. Navigate to the UCCNC installation directory to /USB_installer/. Highlight the "x64" directory if you have a 64bit Windows operating system installation. Choose the "x86" directory if you have a 32bit installation. Press ok.

7. Start the installation with "Next" button.

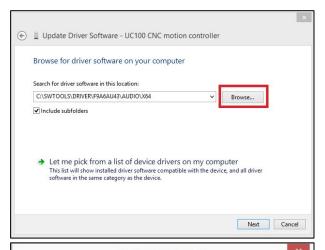

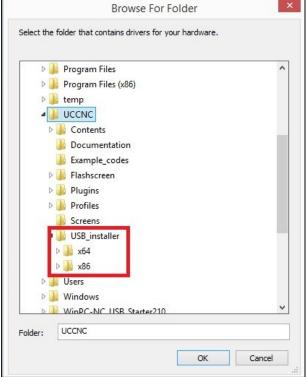

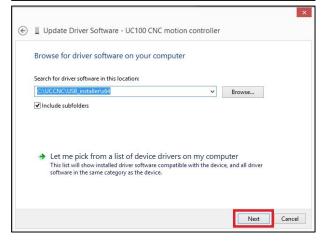




8. The installation starts...

9. ... and will be completed with a success notice.

 Check the UC100 device in the device manager again. The controller is now ready to work.

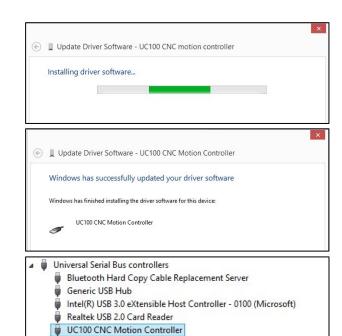

USB Composite Device